


BRP-Powertrain

INSTALLATION MANUAL

Graphic

Fuel system

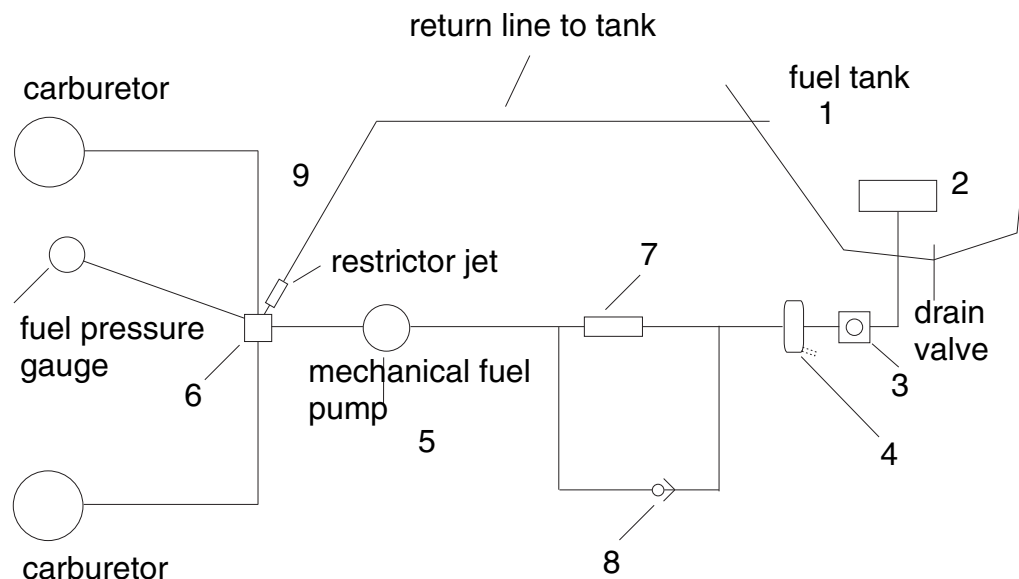

Part	Function
1	Fuel tank
2	Coarse filter
3	Fire cock
4	Fine filter/water trap
5	Mechanical fuel pump*
6	Fuel pressure control*
7	Electrical fuel pump
8	1x check valve
9	Return line from tank to engine (with integrated adapter sleeve)
	* Standard version

Fig. 2

07306